

Stockpot Stove User Manual



Section 1:
Installation Instructions

Section 2:
Operating Instructions

Section 3:
Cleaning & Maintenance

WARNING: THE STOCKPOT AND ITS PARTS ARE HOT. BE CAREFUL WHEN OPERATING, CLEANING OR SERVICING THE STOCKPOT RANGE

Improper installation, adjustment, alteration, service or maintenance can cause property damage, Injury or death.

Read the installation, operating and maintenance instructions thoroughly before installing or servicing this equipment.

For Your Safety

Do not store or use gasoline or other flammable vapours and liquids in the vicinity of this or any Other appliance.

Important

Contact your local gas supplier if you smell gas near this equipment.

The appliances must be installed by a competent person in compliance with the Installation and servicing instructions and the national regulations in force at that time.

Section 1: Installation instructions:

- 1) Set the unit in the position under the extraction hood with adequate ventilation
- 2) Make sure the floor is level
- 3) Place largest pot to be used on the stove to check clearance before connecting gas hose (minimum clearance 6 inch from sides and back)
- 4) Gas hose should be connected at the rear of the stove. An accessible shut off valve should be installed in line
- 5) The front of the unit must be kept clear to avoid restriction of air supply for combustion
- 6) The installation must conform with the local codes and with national fuel gas codes

Section 2: Operating instructions:

The stockpot stove accommodates a single pan.

The burner is controlled by a single knob (ON/OFF) supported by a pilot burner and flame failure thermocouple


Controls: The Stockpot stove is controllable by the knob at the front. The knob can be turned clockwise or anti-clockwise to operate the burner.

Lighting instructions:

Position Off

Burner and pilot off


To turn to Position 1, press in and turn anti-clockwise.

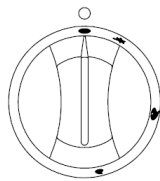

Position 1

Pilot ignition or Pilot on only


Turn to Position 2 or 3 by simply turning anti-clockwise. To turn off, press in and turn clockwise.

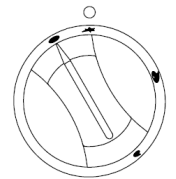

Position 2

Burner Full On


Turn to Position 3 by pressing in and turn anti-clockwise. To turn to, Position 1, simply turn clockwise.

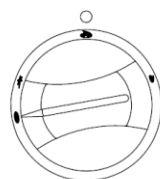

Position 3

Burner at low rate

Turn to Position 2, simply turn clockwise. To turn to Position 1, turn to 2. press in and turn to 1.

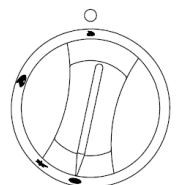

Section 3: Cleaning and Maintenance

- 1) The unit should be cleaned every evening after daily use
- 2) The frame and burner may be cleaned with a soft brush or sponge
- 3) The jets of the burner should be cleaned once a year and must be performed by an authorized gas service company. The jet type burner should be cleaned with a core brush and appropriate size number drill
- 4) After cleaning, rinse with clean water and dry
- 5) Keep this book on hand for future reference